 




Cook's Corner Kitchen

ASSEMBLY INSTRUCTIONS

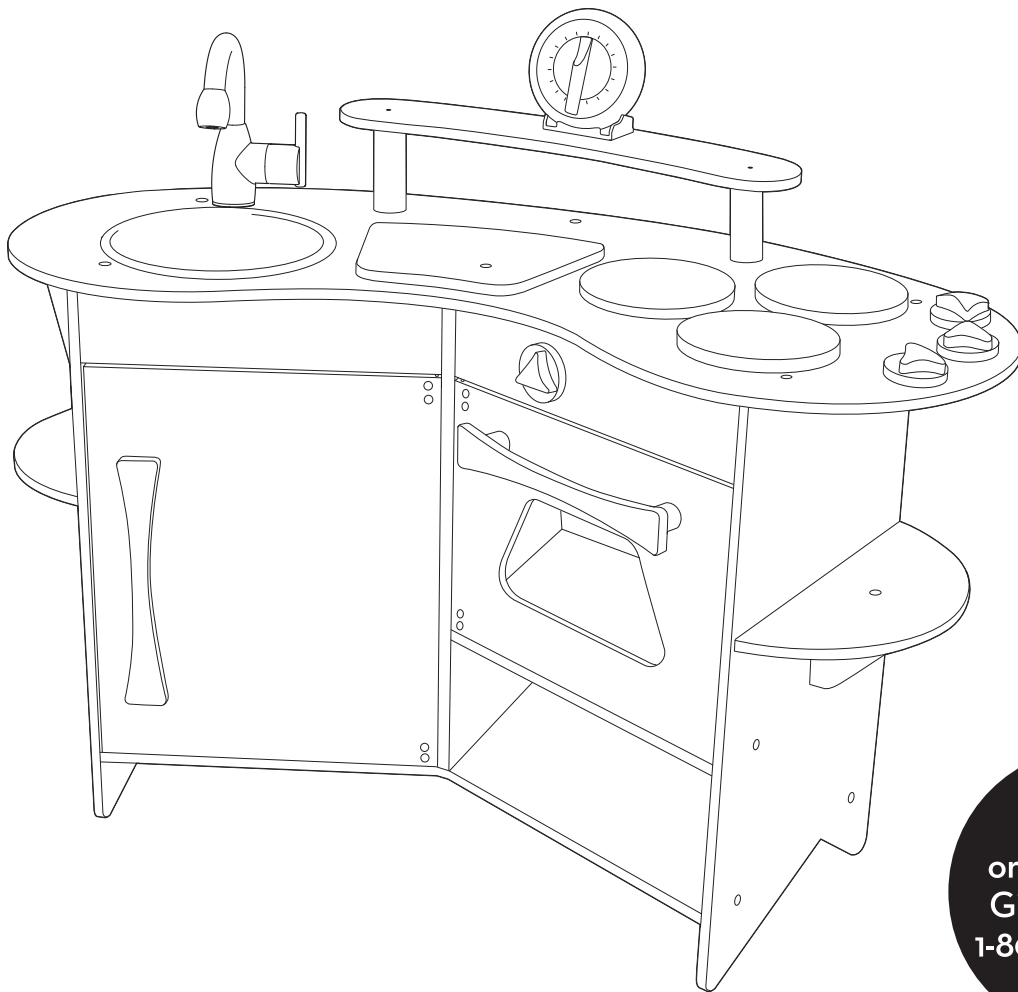

Have a
question
or need help?
Give us a call!
1-800-284-3948

Item # 3950

We care about your comments. Please call us!

Melissa & Doug
1-800-284-3948
www.MelissaAndDoug.com

Melissa & Doug products meet or exceed U.S. testing standards and pass our high quality requirements.

© Melissa & Doug, LLC, P.O. Box 590, Westport, CT 06881

MADE IN CHINA

WARNING:
CHOKING HAZARD - Small Parts.
Not for children under 3 years.

CAUTION:
ADULT ASSEMBLY REQUIRED.

Ages 3+

THANK YOU!

Thank you for choosing the Melissa & Doug Cook's Corner Wooden Kitchen! It's a terrific way to help nourish a child's creativity and imagination, and to inspire budding chefs to hone their craft for years to come.

NOW IT'S TIME TO PUT IT TOGETHER!

Don't worry, assembling your new kitchen is simple, and we're here to help. It may go a little faster with a partner to lend a hand, but we've made it so one person can assemble the kitchen. Here are a few tips before you begin:

- Read through all the instructions first.
- Clear a flat, covered space (carpeted is best) to lay out all the materials so everything is close at hand.
- You will need a Phillips head screwdriver (not included) to assemble the kitchen.
- The instructions include lots of helpful pictures—we show you, step-by-step, exactly how to align pieces and parts for speedy and accurate assembly. Note that hardware needed for each step is shown in the upper right corner of the page, each piece being added in a given step is highlighted in gray, and the “assembled view” (what it looks like when the step is completed) is included in the lower right corner of every page.
- In the instructions, the name of a part is followed by a letter or number in parentheses. This letter or number corresponds to the sticker on the part, as well as the picture of the part shown on pages 2-3.
- Helpful hints are highlighted with a large exclamation point.



IMPORTANT: Helpful hints are found here.

- If you have any questions, we're here for you! Give our customer service team a call at 1-800-284-3948!

WARNINGS!

Retain these instructions for future reference.


Warning— Prevent Tip Overs!

- Do not allow children to pull, climb, sit, or stand on any part of the kitchen.
- Never place computers, televisions, or other heavy objects on top of the kitchen.
- The kitchen must be placed on a hard, flat, and level surface.
- For more information on how to prevent furniture tip overs in your home visit AnchorIt.gov.
- The kitchen must be assembled as instructed.


MAINTENANCE:

Ensure the kitchen continues to function properly and safely by regularly checking the hardware and tightening when necessary.


WOODEN PARTS - Be Smart—Sort Your Parts

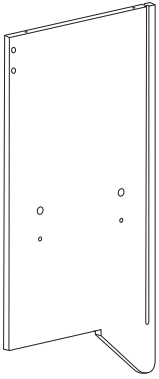


A center panel

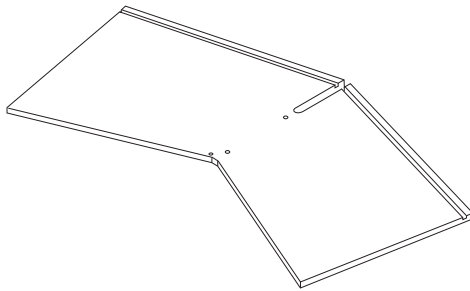


B base panel

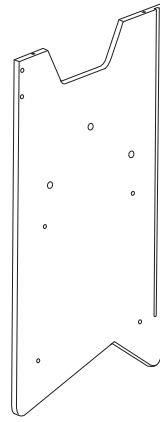


C left side panel

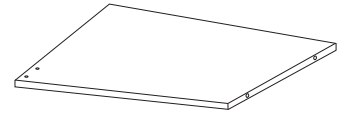


D large left shelf

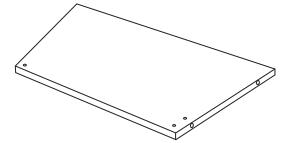


E large right shelf

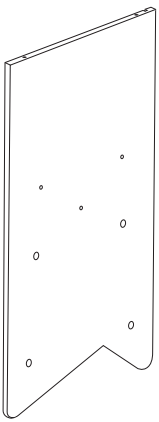


F right side panel

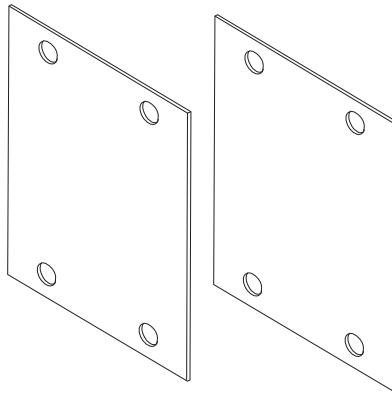


G back panels (2)

 

H left shelf brace

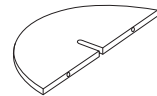


I left shelf

 


J right shelf



 K right shelf brace




L oven panel

 


M front left panel



 
N handles (2)

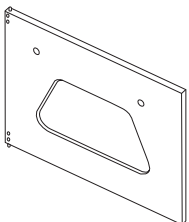

O oven door

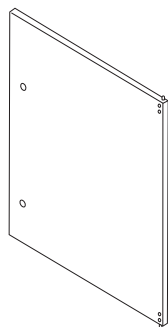 


P cabinet door

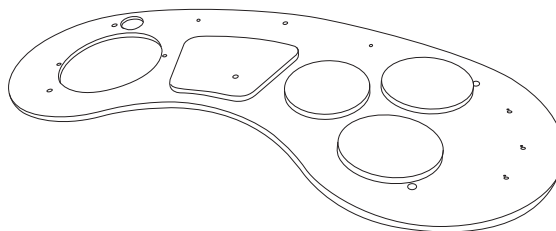 

Q countertop




 R upper shelf supports (2)



S upper shelf

 METAL PARTS




1 long screw (31)




2 metal bracket screw (2)



 3 metal bracket (2)



4 short bolt (4)

 

5 flanged bolt (2)

 
PLASTIC PARTS




6 control knobs (4)




7 control knob nuts (4)

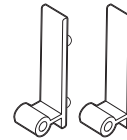


8 door latch springs (2)

 


9 door latch catches (3)

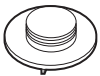


10 faucet screw

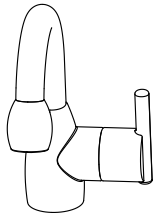

11 faucet

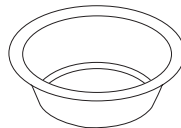

12 sink bowl

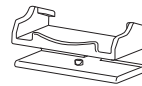

13 timer clamp




14 timer

Helpful Hints and Tips


- Note: Some packages of hardware may have extra pieces.
- You will need a Phillips head screw driver (not included) to assemble the kitchen.

IMPORTANT: Barrel nuts and screws are used to join the main wood panels together. The pre-installed barrel nuts have been properly aligned at the factory to allow the screws to easily join the panels. If any Barrel Nuts have shifted during shipping, use a screwdriver to realign them.

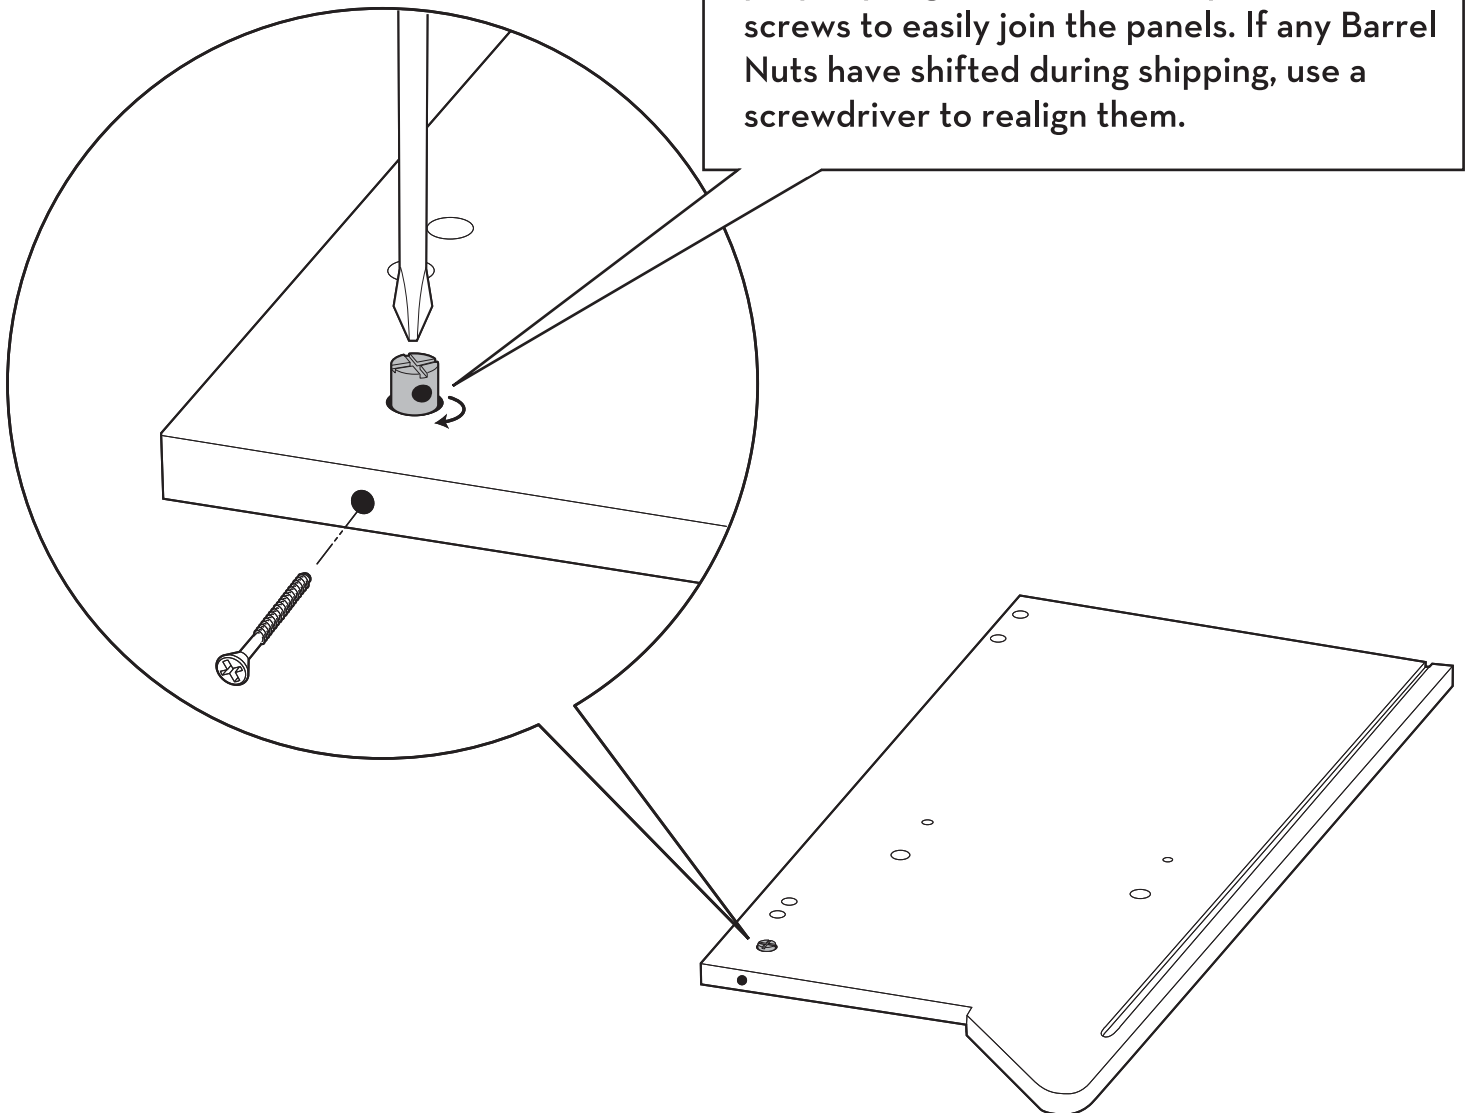



STEP 1 - Every Journey Begins with the First Step

Using 2 long screws (part 1), attach center panel (part A) to base panel (part B).

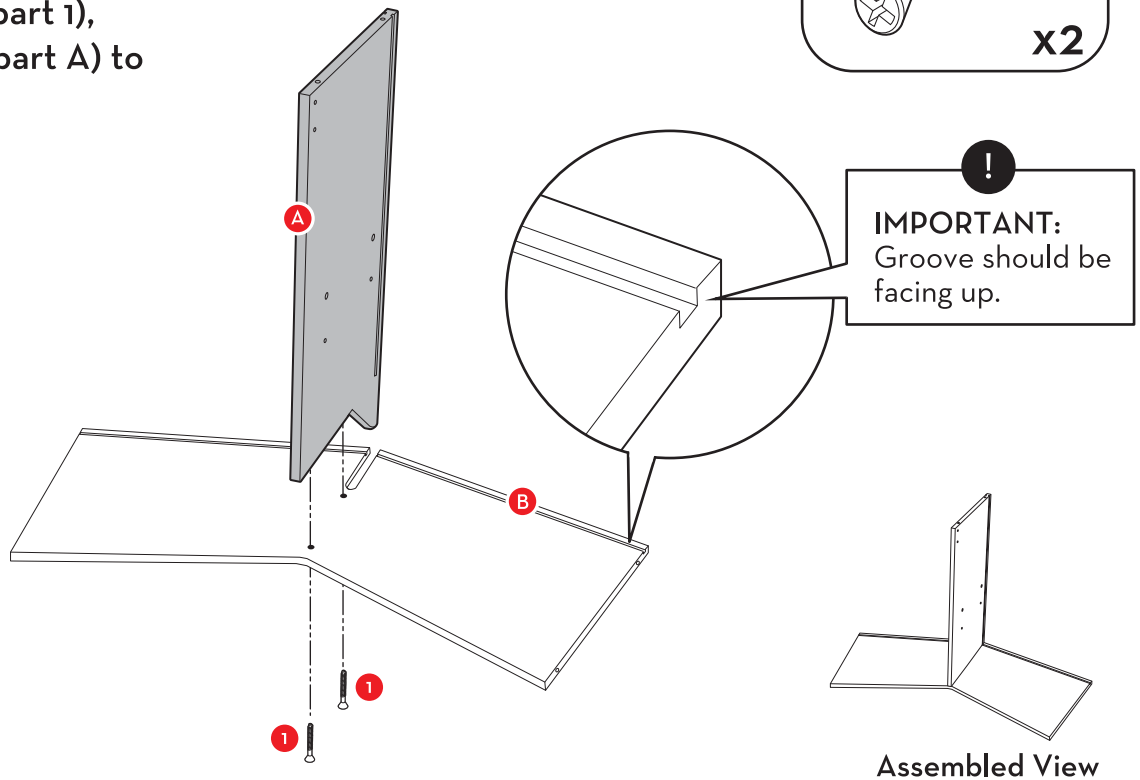




STEP 2 - Side by Side

- Using 2 long screws (part 1), attach the left side panel (part C) to the large left shelf (part D).
- Using 2 long screws (part 1), attach the large right shelf (part E) to the right side panel (part F).

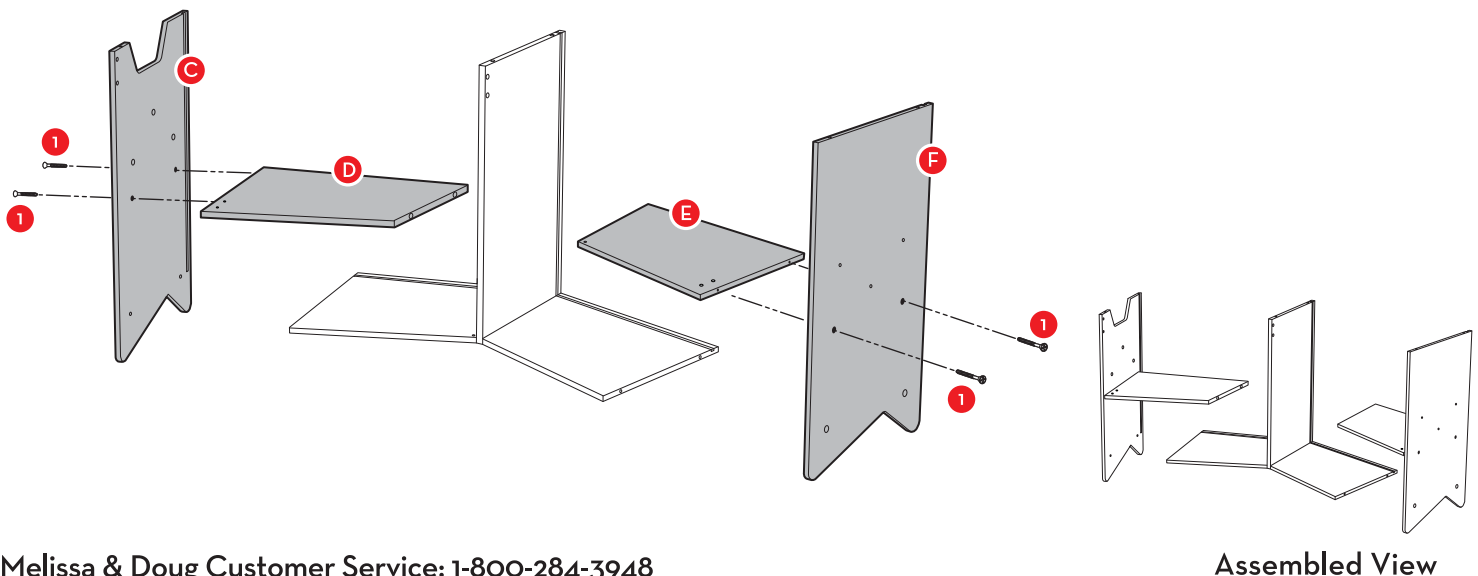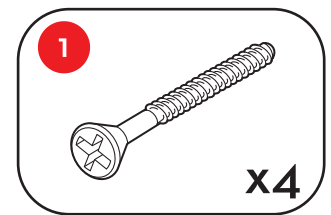

STEP 3 - That's Right




Using 4 long screws (part 1), attach the assembled E & F panels (right side) to the kitchen's center panel.

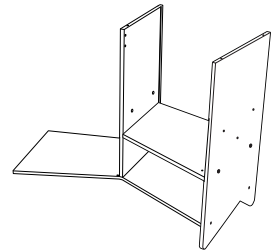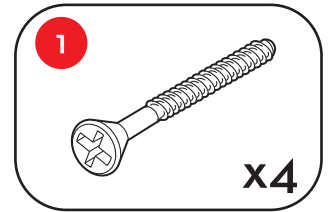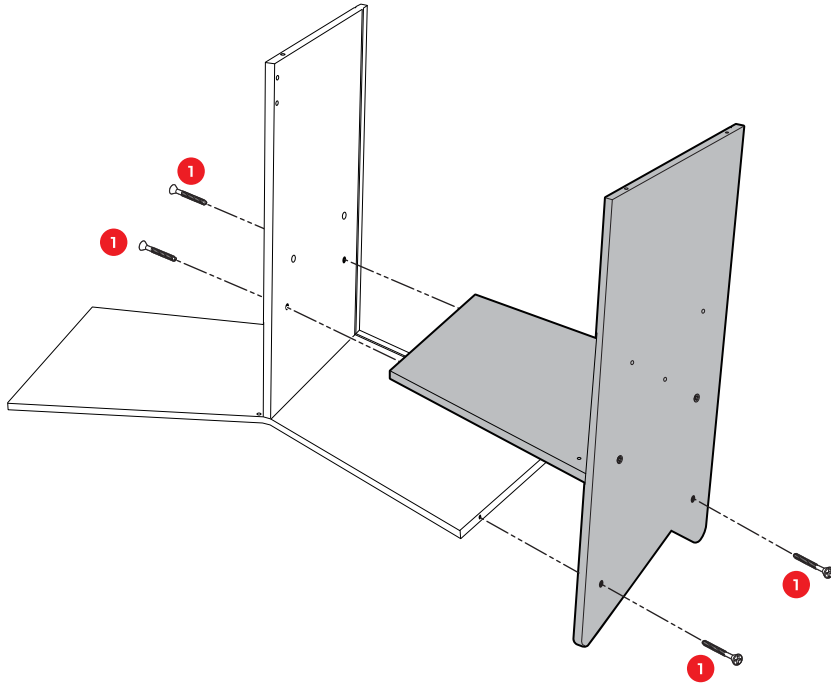

Assembled View

STEP 4 - What's Left



Using 4 long screws (part 1), attach the assembled C & D panels (left side) to the kitchen's center panel.

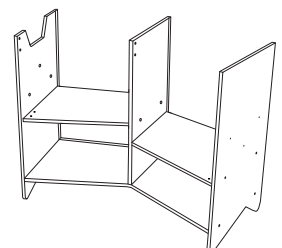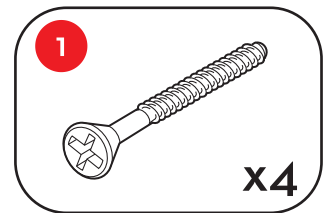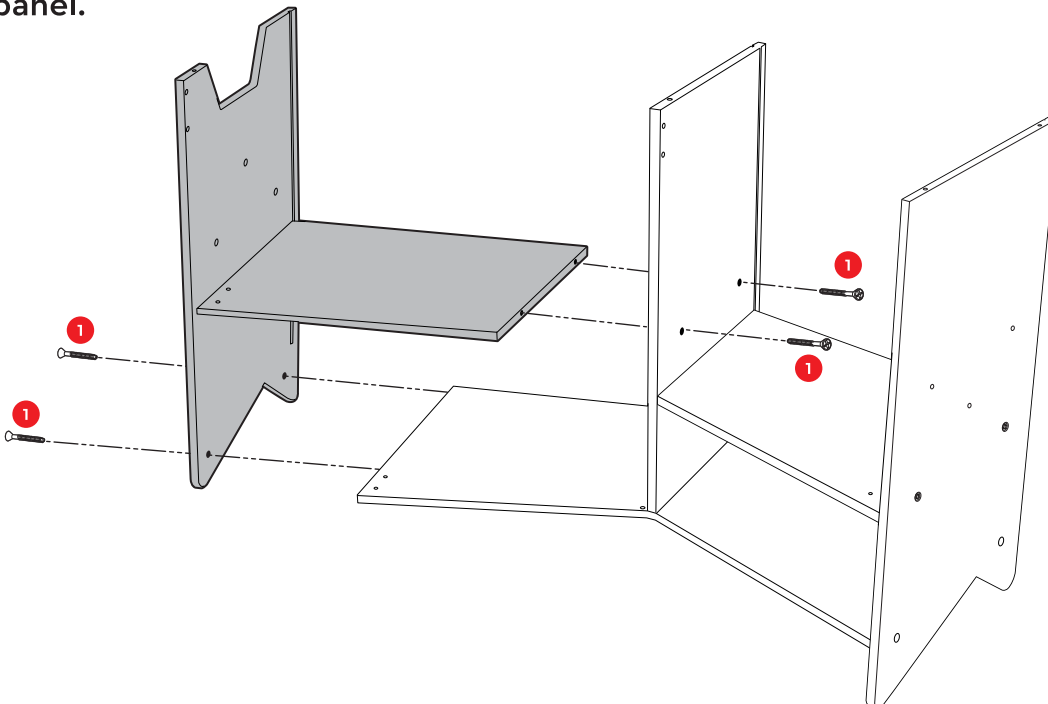

Assembled View

STEP 5 - Groovy




Slide the back panels (part G) into the grooves on the back of both sides of the kitchen.

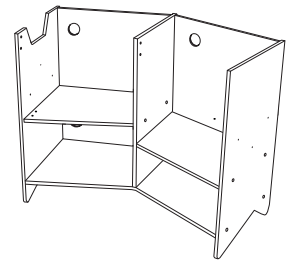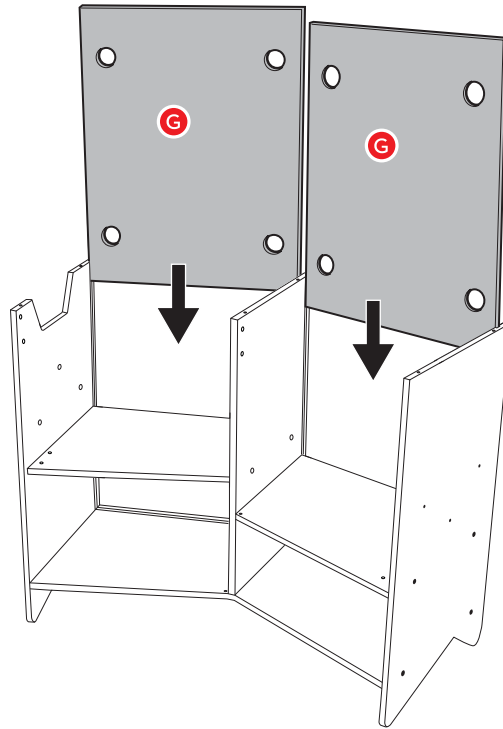

Assembled View

STEP 6 - Brace Yourself




- Using 1 long screw (part 1), attach the left shelf brace (part H) to the kitchen.
- Slide the left shelf (part I) into the slot in the shelf brace (part H), then attach shelf to the kitchen using 2 long screws (part 1).

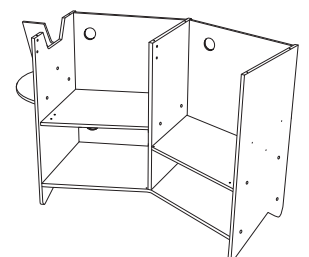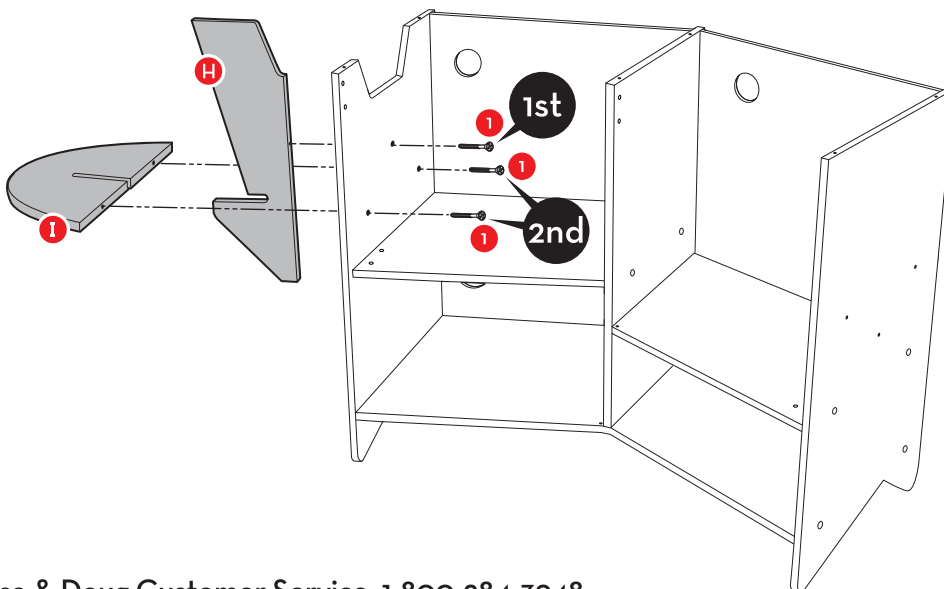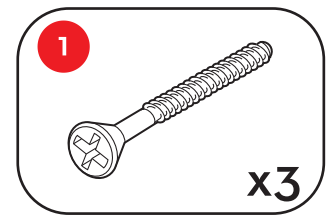

Assembled View

STEP 7 - Do It Your-Shelf



- Using 1 long screw (part 1), attach the right shelf (part J) to the right shelf brace (part K).
- Using 3 long screws (part 1), attach the assembly of J & K to the kitchen.

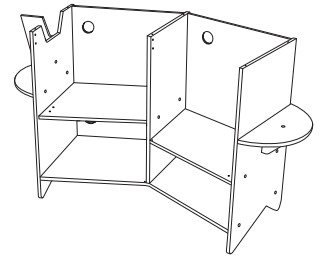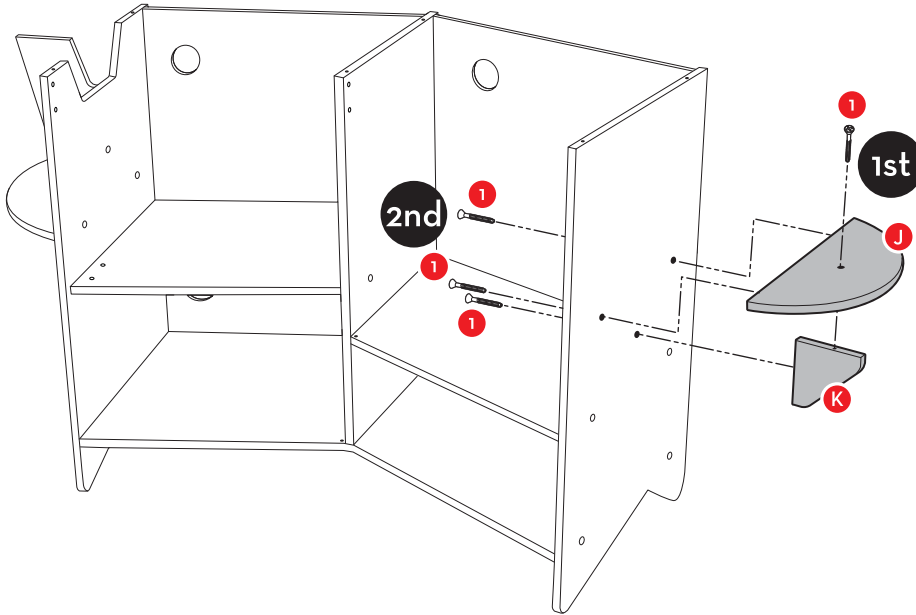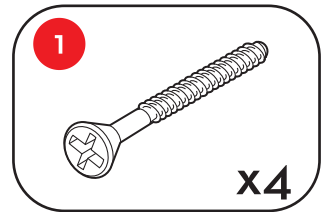

Assembled View



STEP 8 - The Knob For the Job

Slide 1 control knob (part 6) into the holes in the oven panel (part L), and press and screw 1 control knob nut (part 7) firmly onto the back of the knob.

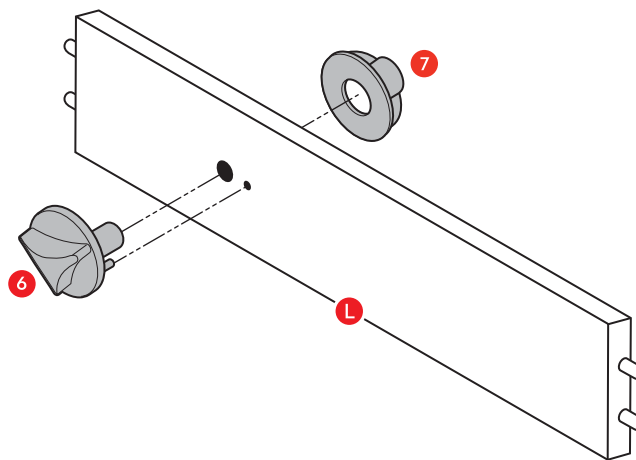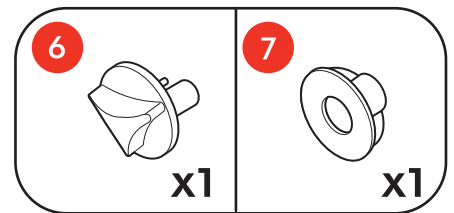


STEP 9 - Let's Bracket That

Using the 2 metal bracket screws (part 2), attach the metal brackets (part 3) to the back of oven panel (part L) and the back of the front left panel (part M).

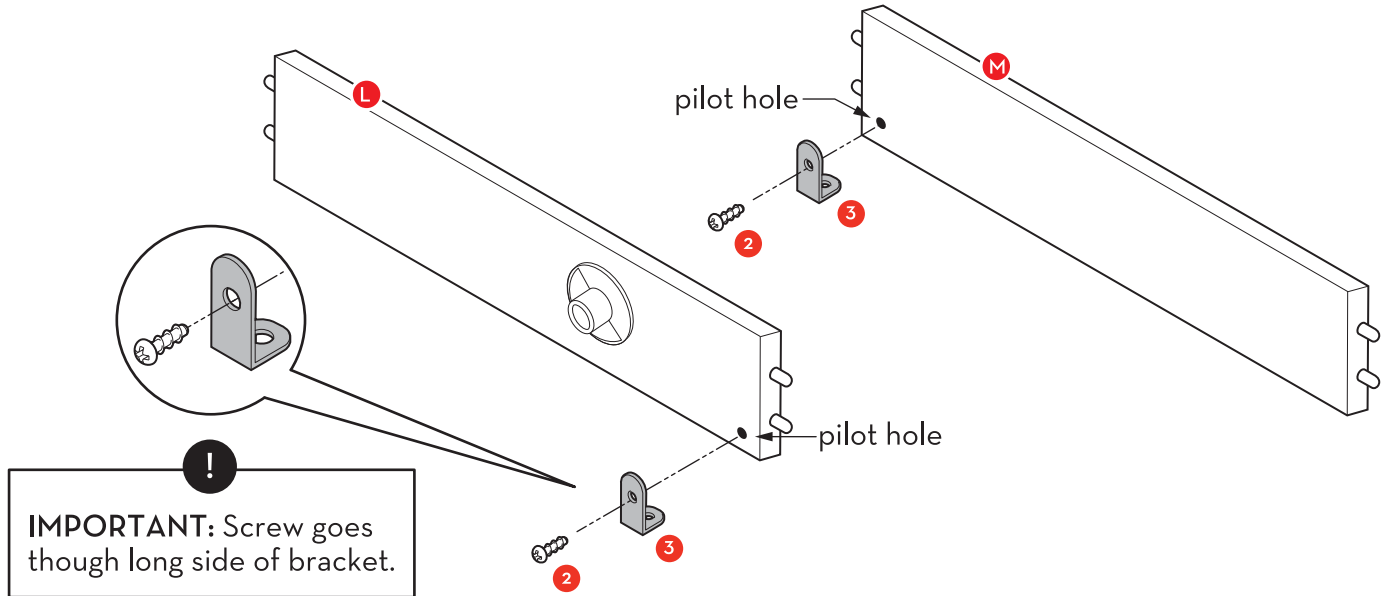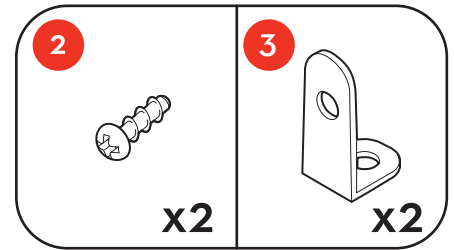




STEP 10 - Perfectly Placed Panels

Insert oven panel (part L) and front left panel (part M) into kitchen by slightly spreading side panels and inserting dowels into the holes.

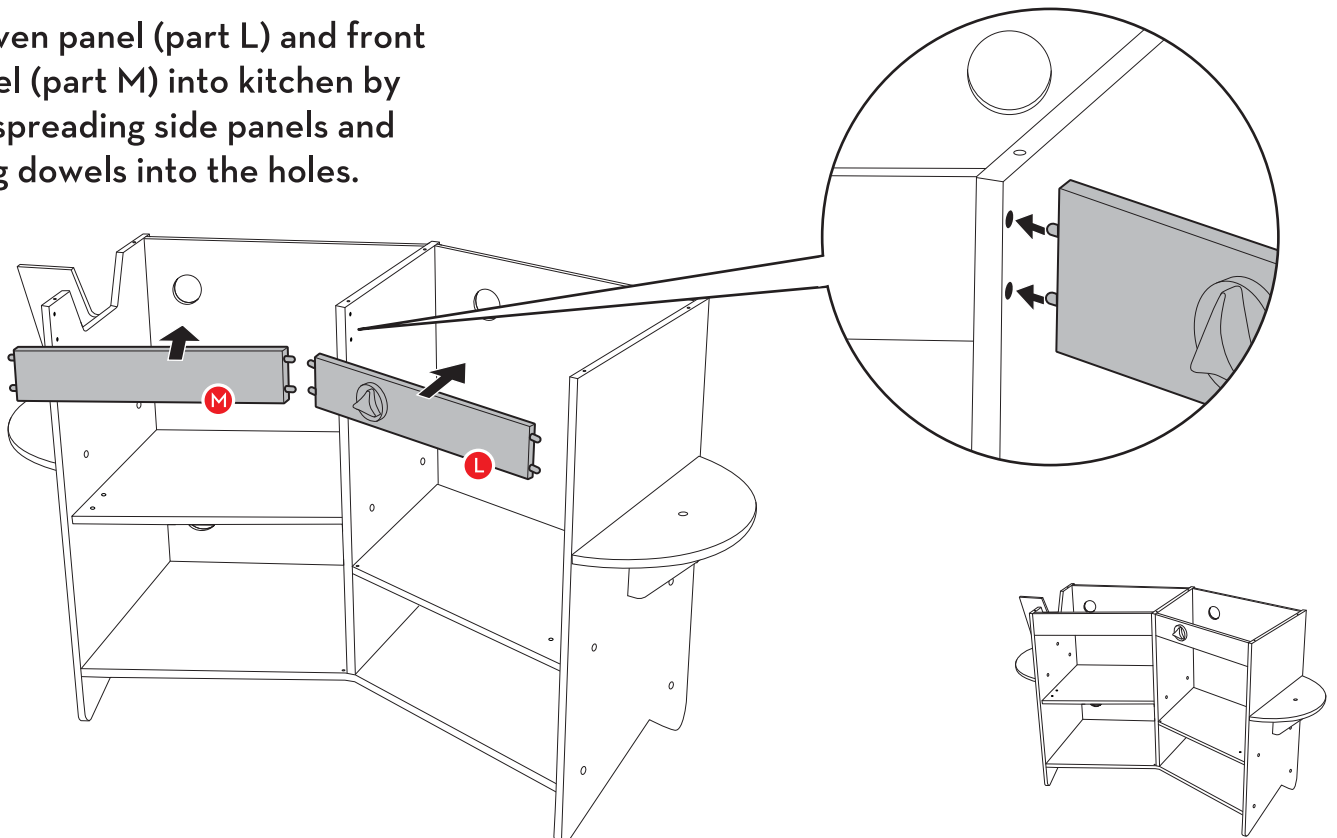





STEP 11 - Doors and More

- Using 4 short bolts (part 4), attach the handles (part N) to the oven door (part O) and the cabinet door (part P).
- Insert 2 door latch springs (part 8) into the back of each door.

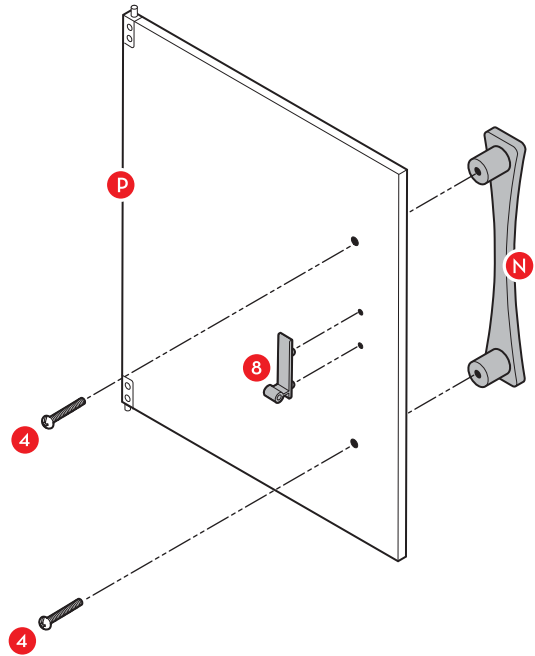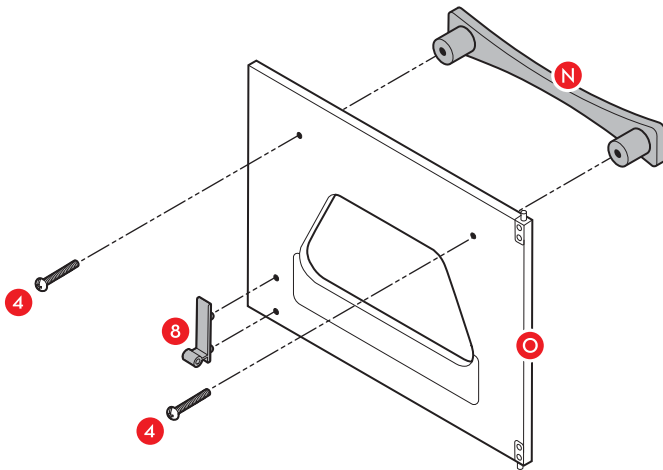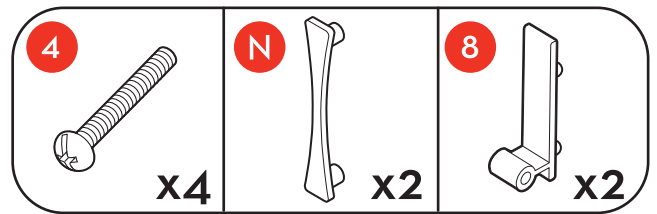

STEP 12 - Catch As Catch Can


Insert the 3 door latch catches (part 9) into the kitchen unit.

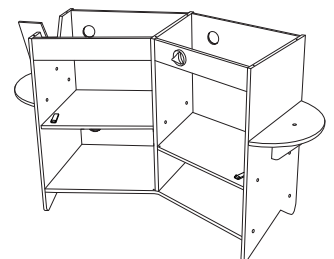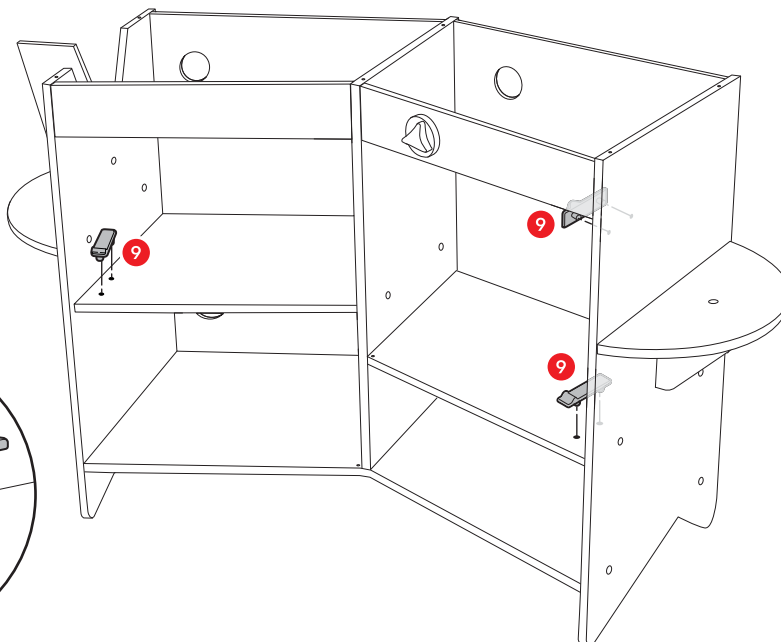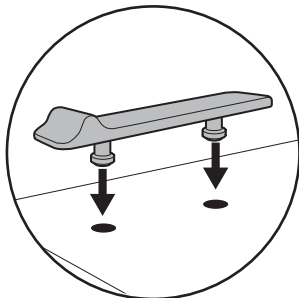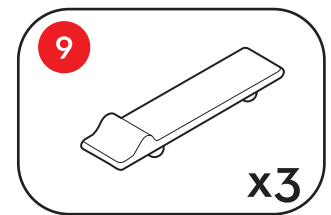

Assembled View



STEP 13 - Don't Come Unhinged

Insert the doors' upper and lower spring hinges into the hinge holes on the base, right shelf, and the front panels of the kitchen.

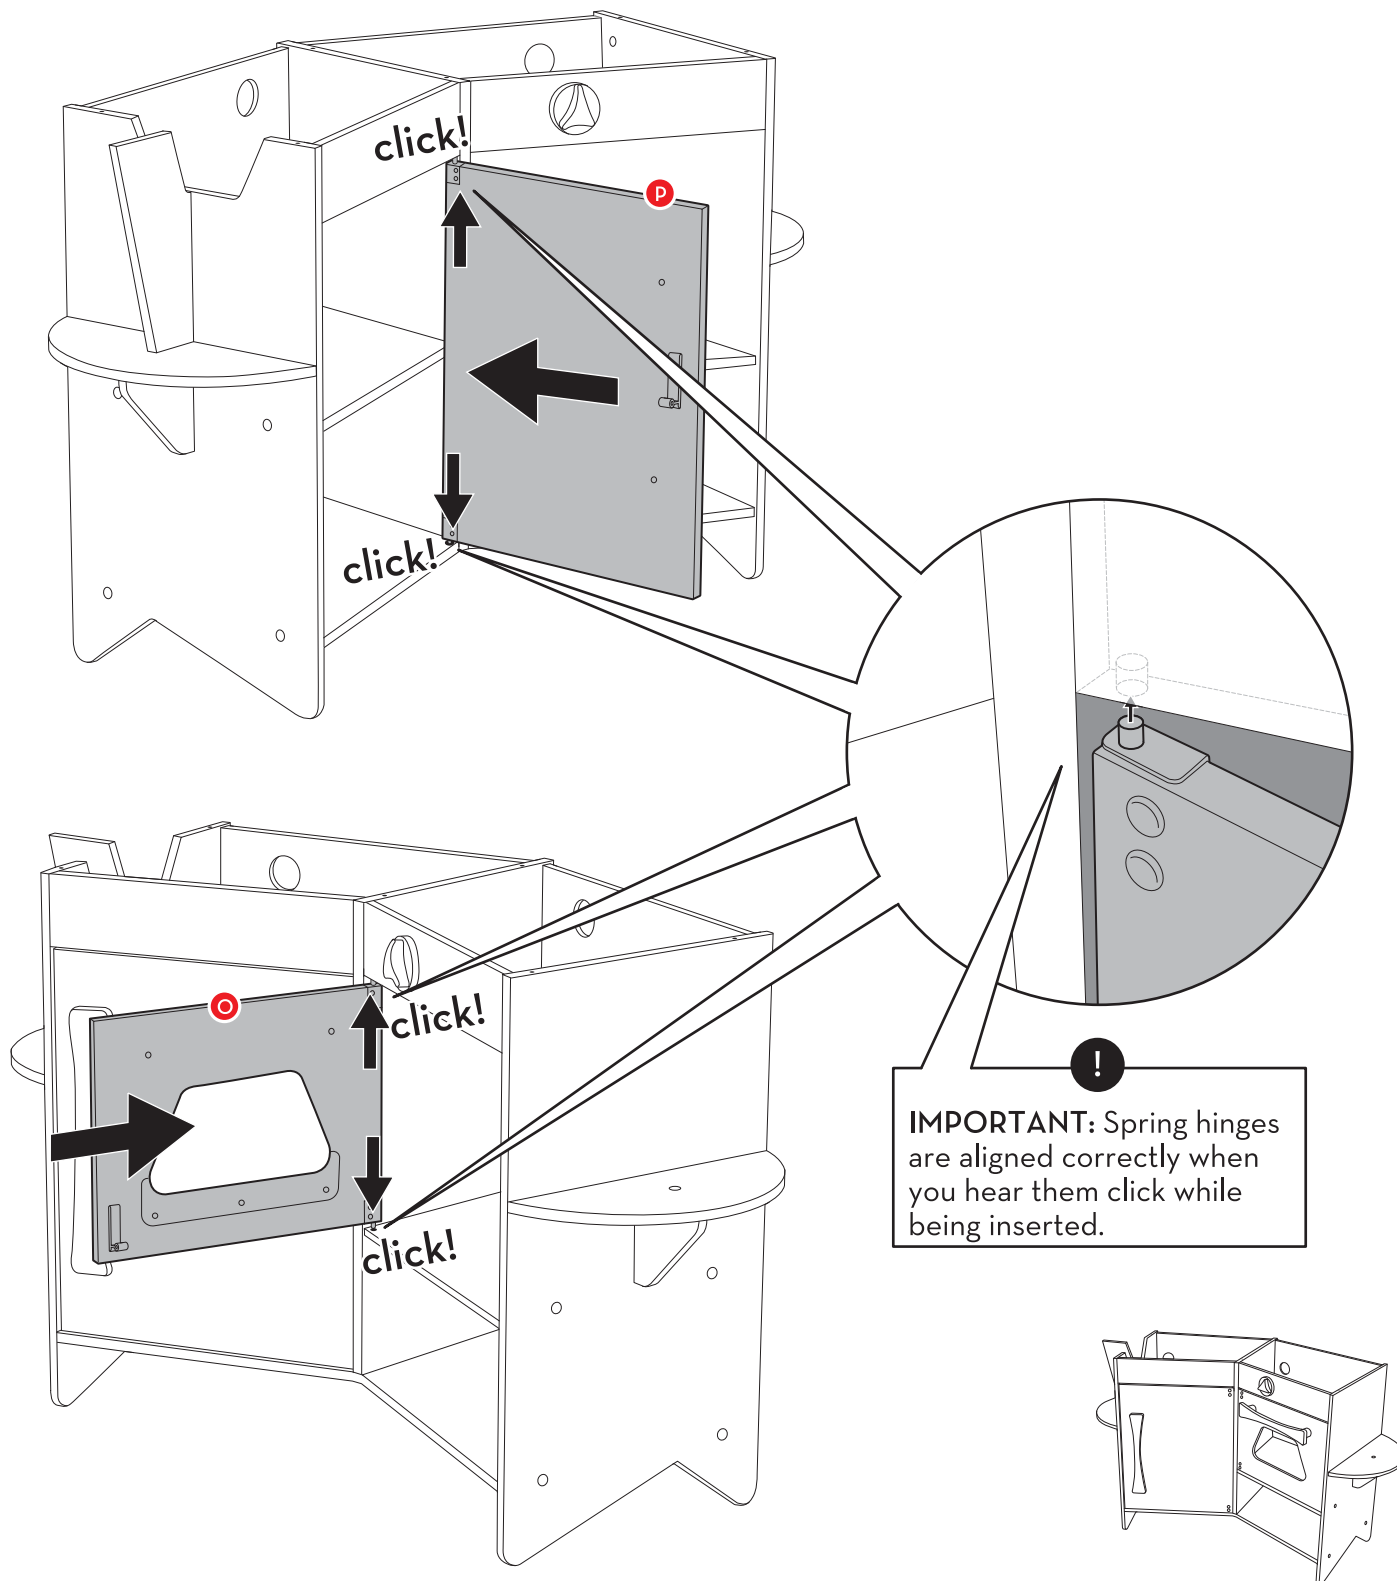


STEP 14 - Encounter the Countertop

- First, using 2 long screws (part 1), attach both upper shelf supports (part R) to countertop (part Q).
- Second, using the faucet screw (part 10), attach the faucet (part 11) to countertop.
- Third, slide 3 control knobs (part 6) into the holes in the countertop and press and screw control knob nuts (part 7) firmly onto the back of the knobs.

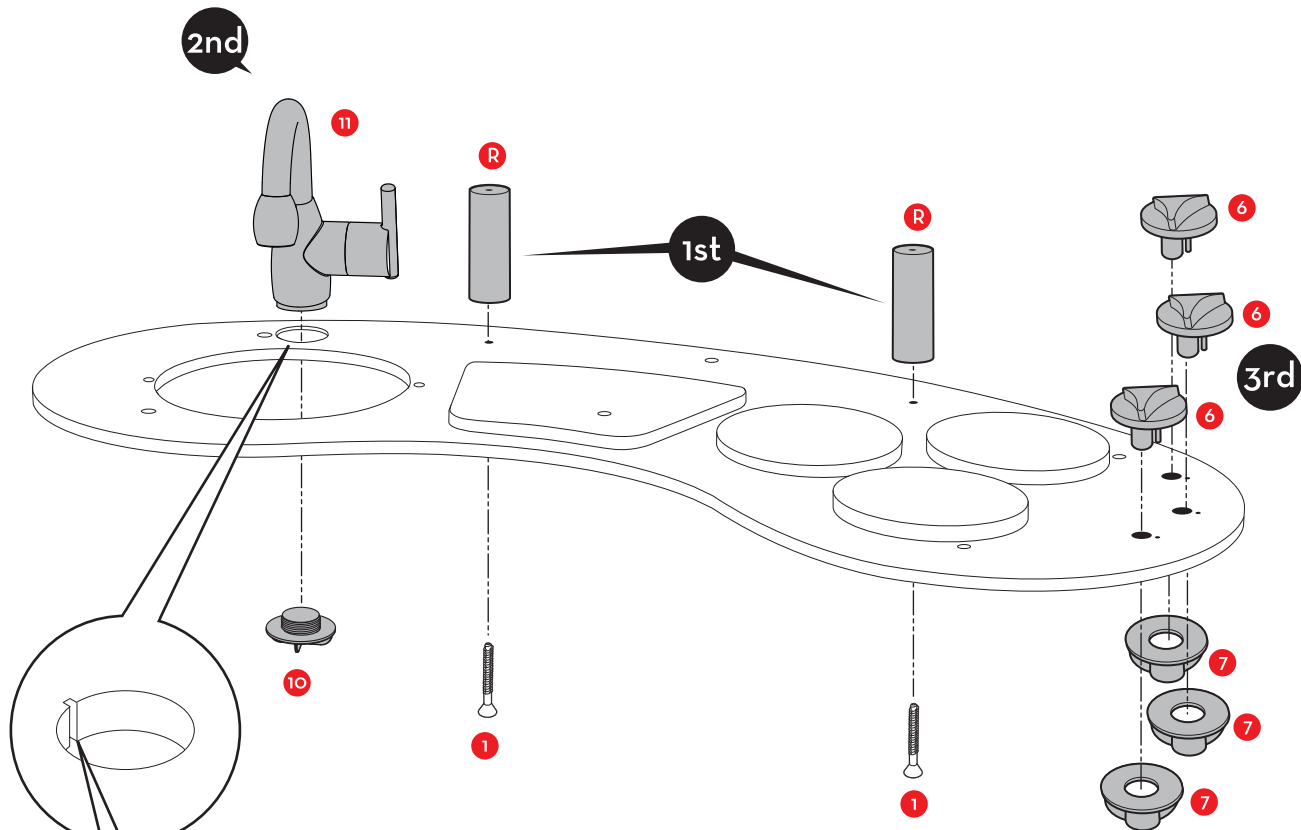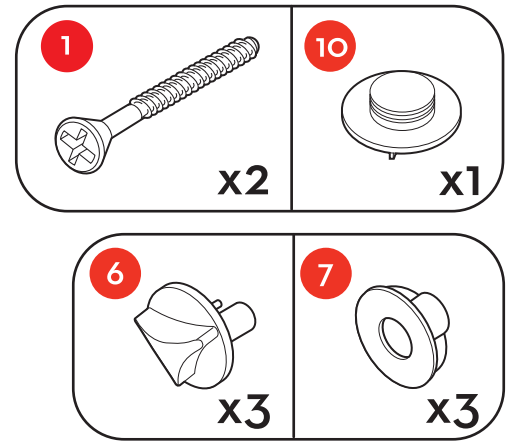




IMPORTANT:
Ridge on faucet
should align to
groove in hole.

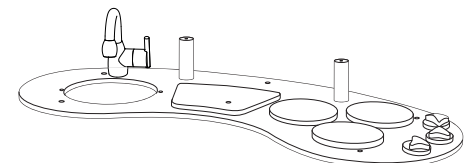

Assembled View

STEP 15 - Sink or Swim


- Using 2 flanged bolts (part 5), attach sink bowl (part 12) from underneath kitchen top.

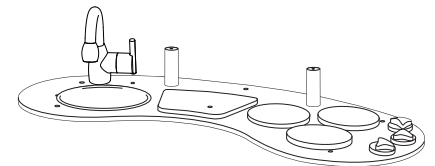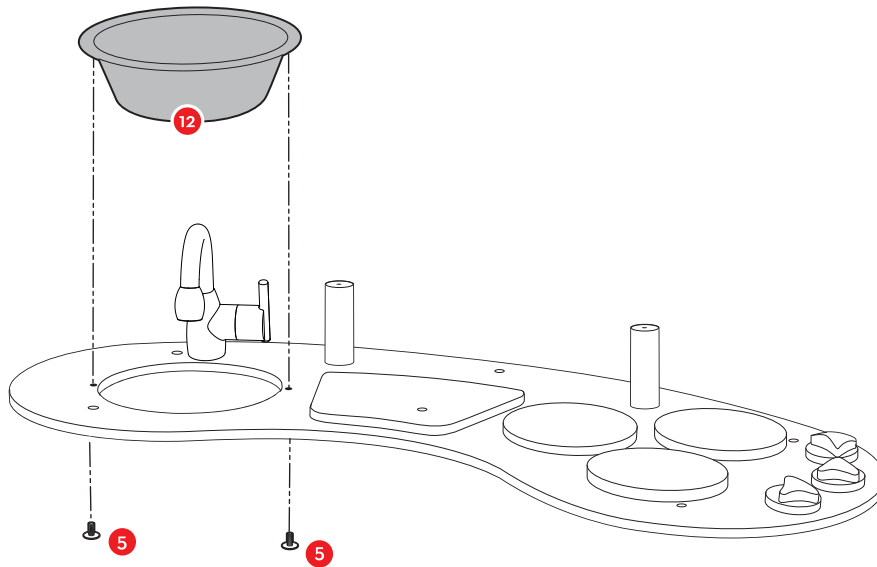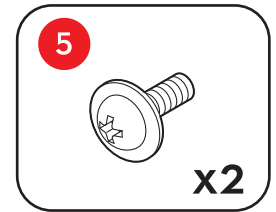



Assembled View

STEP 16 - Top It Off

- Using 6 long screws (part 1), attach the countertop assembly (part Q) to the kitchen.

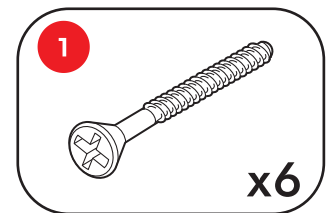



IMPORTANT: When attaching the countertop, be sure to align and partially insert all 6 screws before completely tightening any of them.

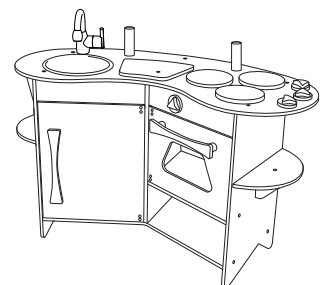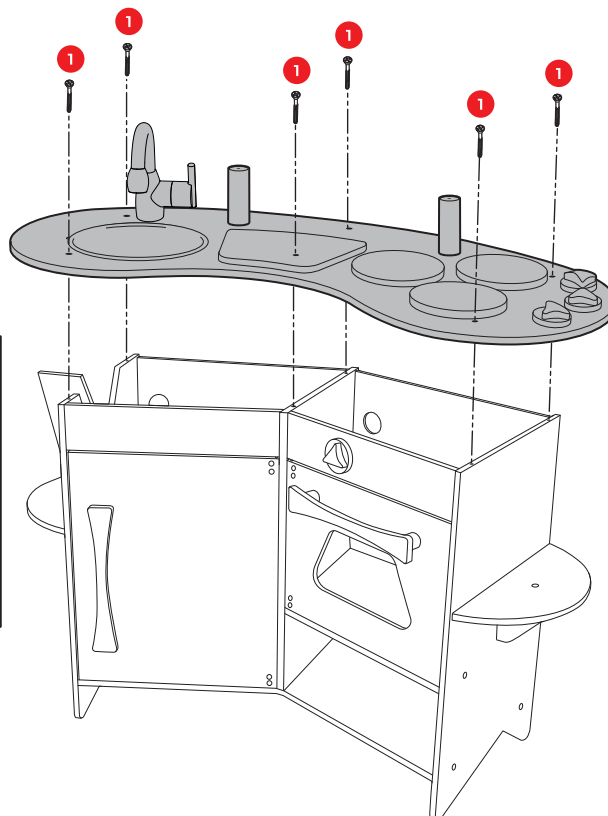

Assembled View

STEP 17 - Three, Two, One—You're Done!

- Using 2 long screws (part 1), attach upper shelf (part S) to the upper shelf supports (part R) on the countertop.
- Slide timer clamp (part 13) onto shelf until it clicks into place.
- Slide timer (part 14) into timer holder.

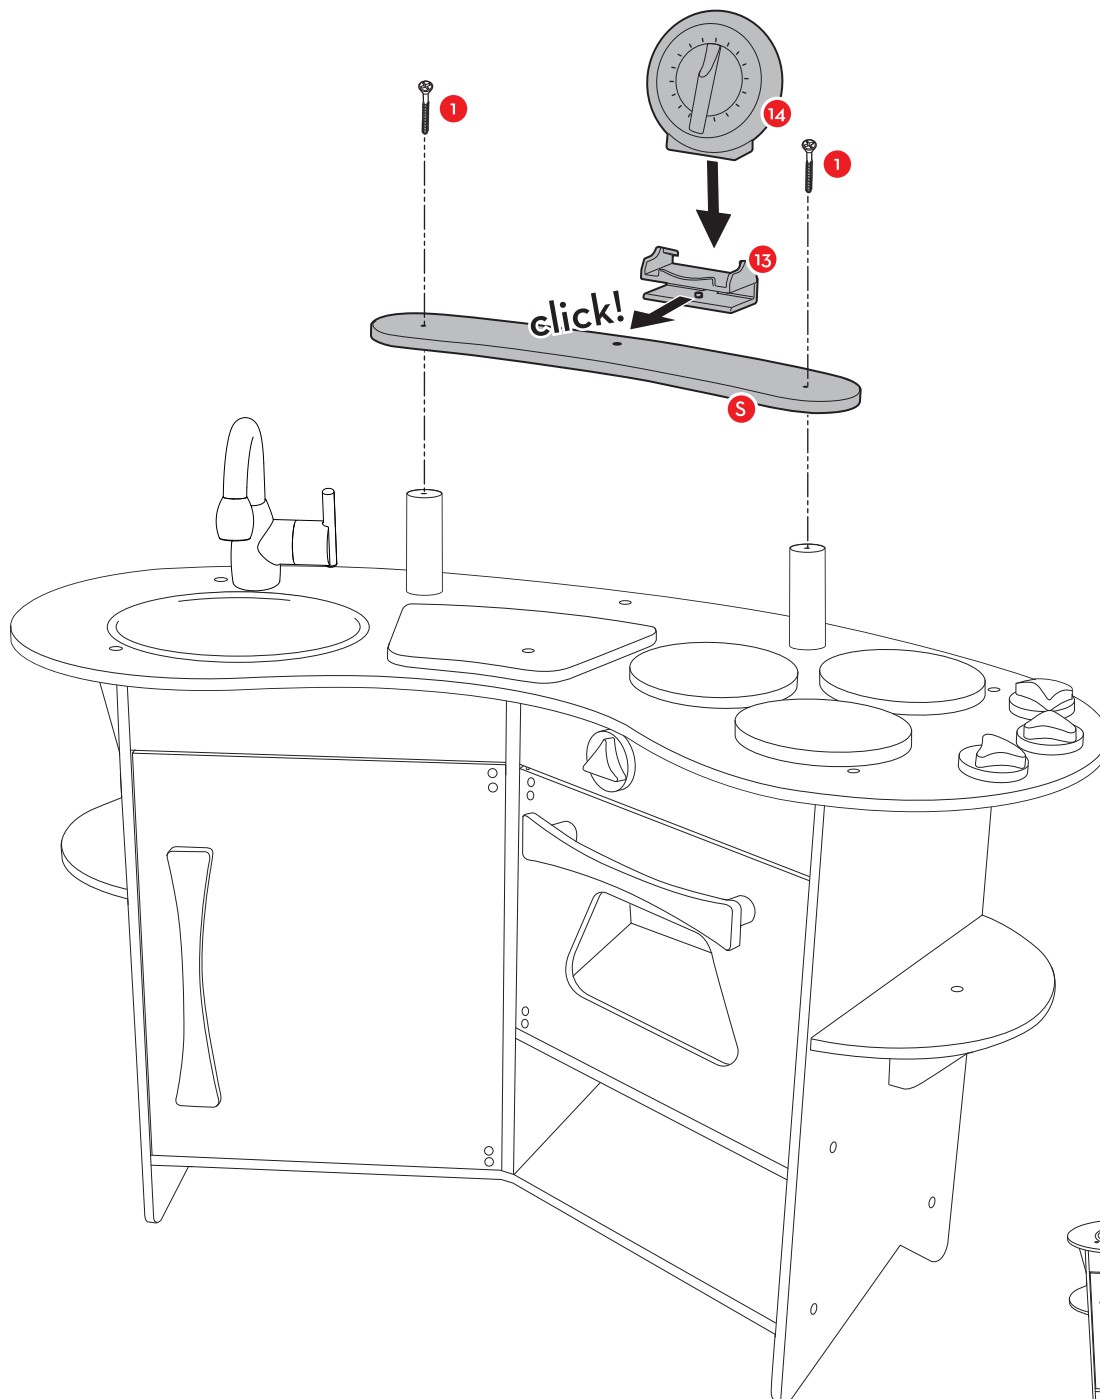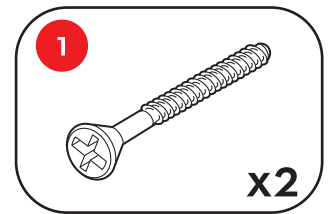

Assembled View


YOU DID IT!

Now the real fun begins—it's time to get cooking! Here are some of the special features of the Cook's Corner Kitchen:

- **GENEROUS STORAGE AND COOKING SPACE:** The large, curved countertop and additional top and side shelves provide lots of room for kitchen play. Store pantry items, cookware, and serving utensils in the two-level cabinet under the sink and on the large shelf under the oven.
- **OVEN DOOR WITH WINDOW:** Use the oven for cooking up imaginative meals, as well as for keeping kitchen accessories neat and organized between playtimes. Take a peek at what's cooking through the window in the oven door!
- **STOVE/OVEN DIALS TURN AND CLICK:** Turn stovetop dials to indicate low to high temperatures for the three flat burners, and the dial on the front to pretend to set the oven temperature. The dials make a satisfying clicking noise when they are turned.
- **SINK HANDLE TURNS AND FAUCET SWIVELS:** Pretend to adjust “hot” and “cold” water flow.
- **WASHABLE SINK:** The sink bowl is washable for easy cleanup when pretend play gets a little messy!
- **KITCHEN TIMER:** Make sure nothing over-cooks with the working three-minute kitchen timer! It attaches right to the shelf, so it's always handy. Best of all, it ticks like a real timer as it's counting down, and makes a loud “ding” when time's up!

ACCESSORIZE

The Melissa & Doug Kitchen Accessory Play Set (#9304) has everything needed to get started with the Cook's Corner Kitchen!

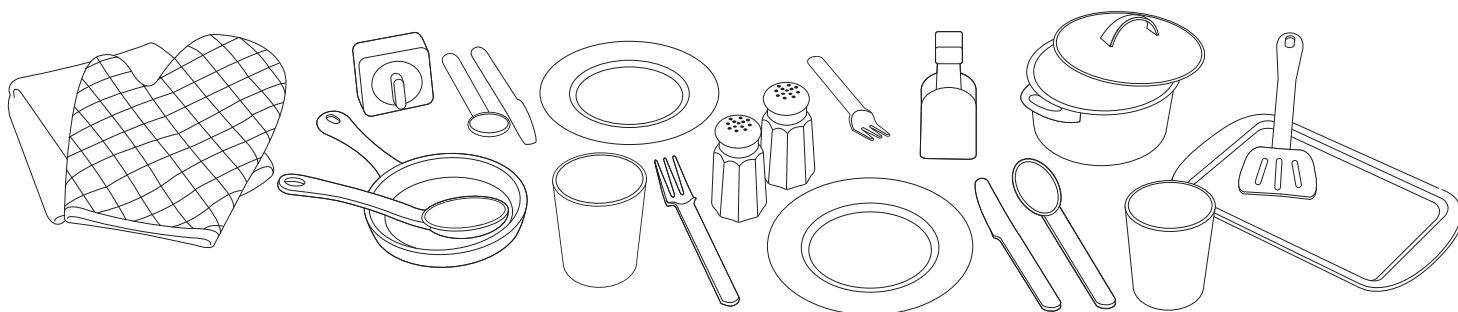

It includes a pot with lid, frying pan, baking sheet, spatula, serving spoon, 2 plates, 2 cups, 2 forks, 2 knives, 2 spoons, salt and pepper shakers, wooden olive oil bottle, timer, dish towel, and an oven mitt.

For this and other play kitchen essentials, such as play food, pantry items, cookware, utensils, and more, visit us at MelissaAndDoug.com!

