

EASY-AS-CAN-BE ASSEMBLY!


Your kite is partially assembled, so you'll be flying in no time!

1. Insert the loose strut between the pockets on the back of kite.
2. Tie a knot to attach the kite line to a loop on the keel on the front of the kite. Use the lower loop in stronger winds and the upper loop in a lighter breeze.
3. Unfurl the tails when you are ready to launch!
Two tails will help keep the kite steadier in stronger winds.

KITE-FLYING TIPS

Follow these simple steps to get your kite soaring safely!

- Choose a location with plenty of space to fly your kite. The ground should be level and flat.
- This kite works best in a light to moderate breeze—Beaufort Number 2-4 (see chart below).
- It's easiest to have someone help you launch the kite. Stand with your back to the wind; helper faces into the wind.
- Let out about 20-25 feet (6-7.6 meters) of the flying line while the helper holds the kite facing upward at head height. Stand farther apart in a lighter breeze, closer together in stronger wind.
- When the line is taut, signal the helper to release the kite.
- When the kite is airborne and stable, let out some line until the kite begins to drop. Pull the line taut until the kite rises higher in the sky.
- Repeat until the kite has reached the best height for wind conditions.

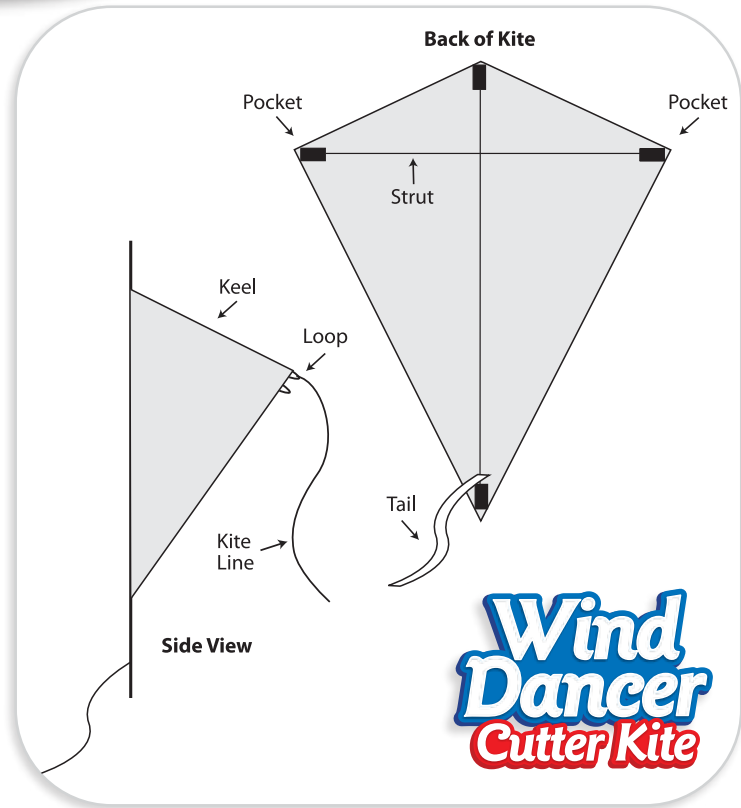

Wind Dancer Cutter Kite

PRECAUTIONS/WARNINGS

- Do not fly kite near overhead cables, wires, or transmission towers. If kite is accidentally caught in power lines, never attempt to dislodge it yourself. Contact relevant authorities for help.
- Do not fly kite near an airport.
- Do not fly kite in wet or stormy weather.
- Never fly kite over other people's heads or over roads or parking lots.
- Always use a line holder. Never hold the line by itself or let the line run through your hands; do not loop or tie line around your fingers.
- If kite gets out of control in a high wind, it's best to cut the line and let it go—better to lose the kite than to cause any damage.
- It's always worth writing your name and address or phone number on your kite, just in case one day it decides to take off without you!

Kite flying is endless fun, but requires thoughtful consideration. Be a responsible kite flyer—always be aware of your surroundings and put safety first!

Beaufort Scale

BEAUFORT #	MPH	KM/H	KNOTS	TERMINOLOGY	DESCRIPTION
0	0-1	0-1	0-1	CALM	Smoke rises vertically
1	1-3	1-5	1-3	LIGHT AIR	Smoke drifts with air
2	4-7	6-11	4-6	LIGHT BREEZE	Weather vanes moved by wind; leaves rustle
3	8-12	12-19	7-10	GENTLE BREEZE	Leaves and small twigs in constant motion; light flags extended
4	13-18	20-28	11-16	MODERATE BREEZE	Small branches sway
5	19-24	29-38	17-21	FRESH BREEZE	Small trees sway
6	25-31	38-49	22-27	STRONG BREEZE	Large branches sway; umbrellas used with difficulty

Ages 3+

Wind Dancer Cutter Kite #30210

MADE IN CHINA

PDC

Melissa & Doug®

We ♥ feedback! Call us: 1-800-284-3948
MelissaAndDoug.com

Melissa & Doug products meet or exceed U.S. testing standards and pass our high quality requirements.

© Melissa & Doug, LLC, P.O. Box 590, Westport, CT 06881

WARNING:
Do not use near overhead power lines or during thunderstorms.

WARNING:
Strangulation hazard. Long cord.

Remove all packaging before giving the product to a child.

Please retain for information.