


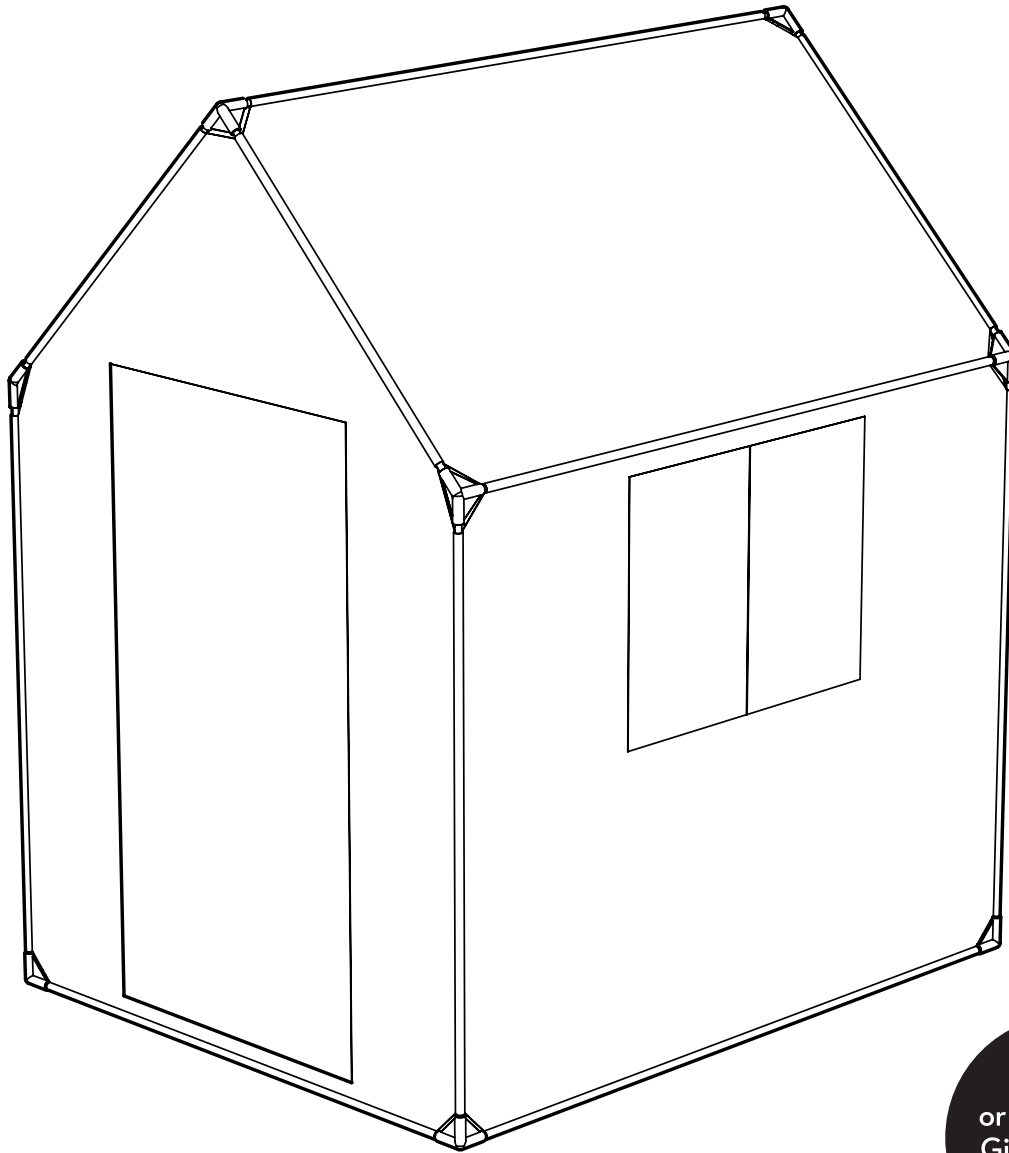

Cozy Cottage Play Tent

ASSEMBLY INSTRUCTIONS



Have a question or need help? Give us a call! 1-800-284-3948

Item #32103

Melissa & Doug®

We ♥ feedback! Call us: 1-800-284-3948
MelissaAndDoug.com

Melissa & Doug products meet or exceed all U.S. toy testing standards and pass our high quality requirements.


© 2020 Melissa & Doug, LLC, P.O. Box 590, Westport, CT 06881
MADE IN CHINA

⚠ WARNING:
ADULT ASSEMBLY REQUIRED.


Ages 3+

PARTS


Sort parts and separate rods by length for easy assembly.

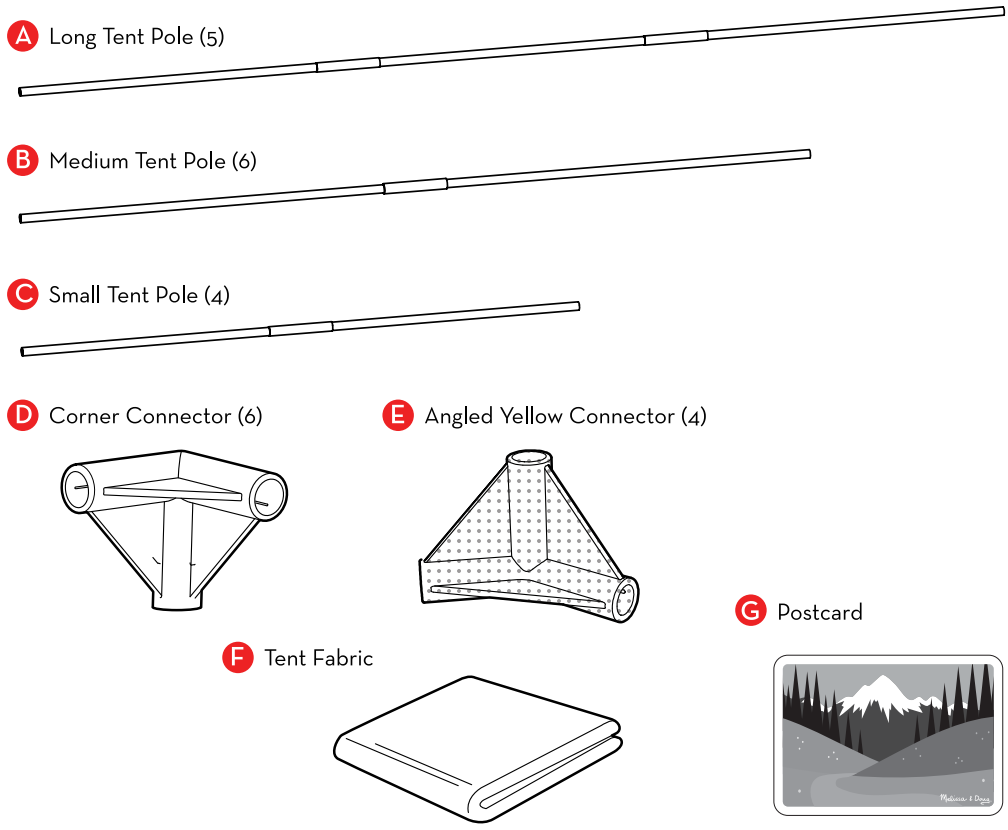- A** Long Tent Pole (5)
 - B** Medium Tent Pole (6)
 - C** Small Tent Pole (4)
 - D** Corner Connector (6)
 - E** Angled Yellow Connector (4)
 - F** Tent Fabric
 - G** Postcard
- 


STEP 1

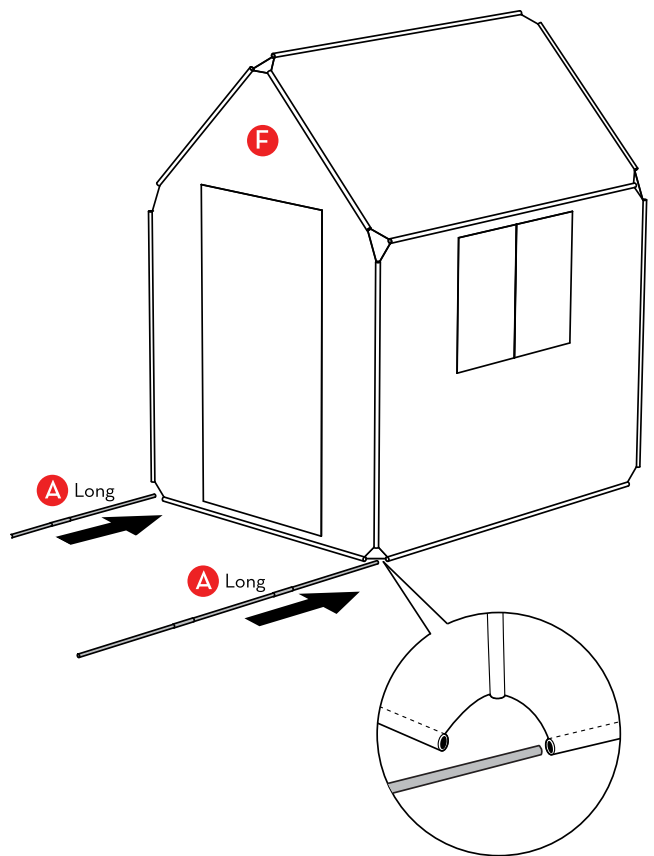


STEP 2

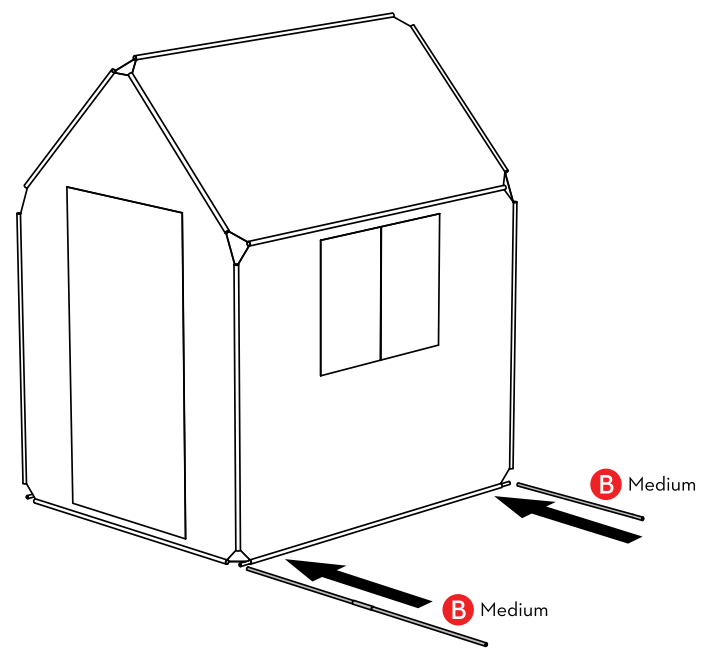


STEP 3

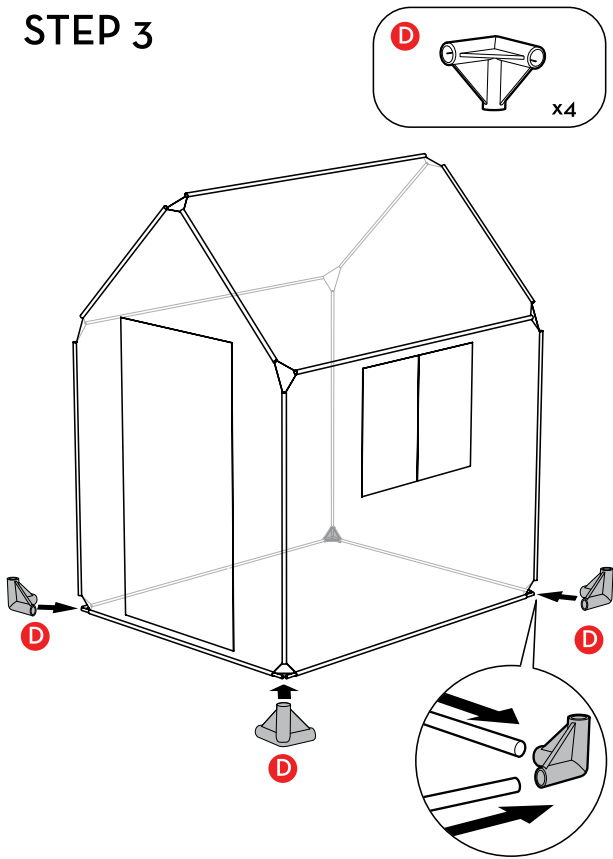


STEP 4

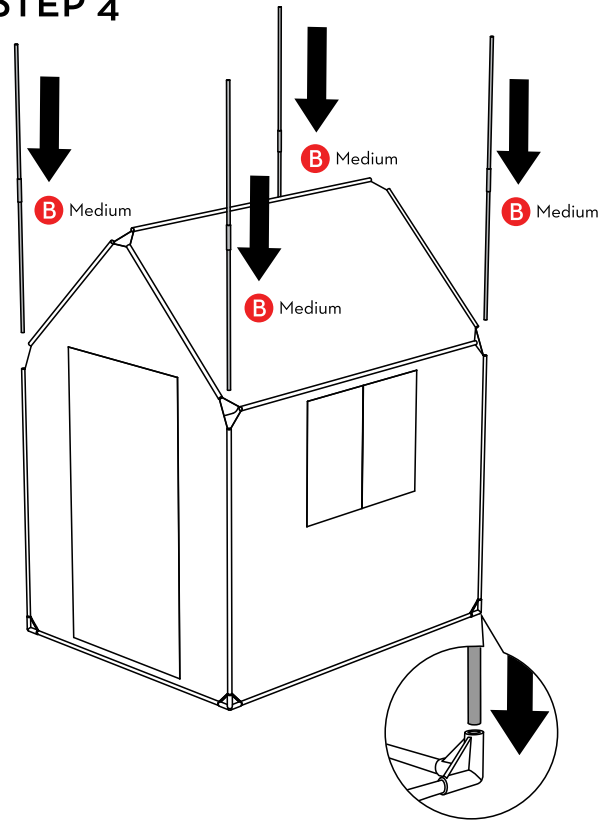


STEP 5

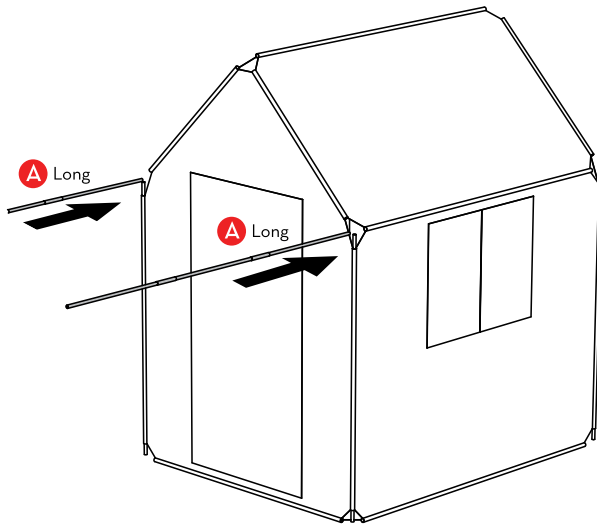


STEP 6

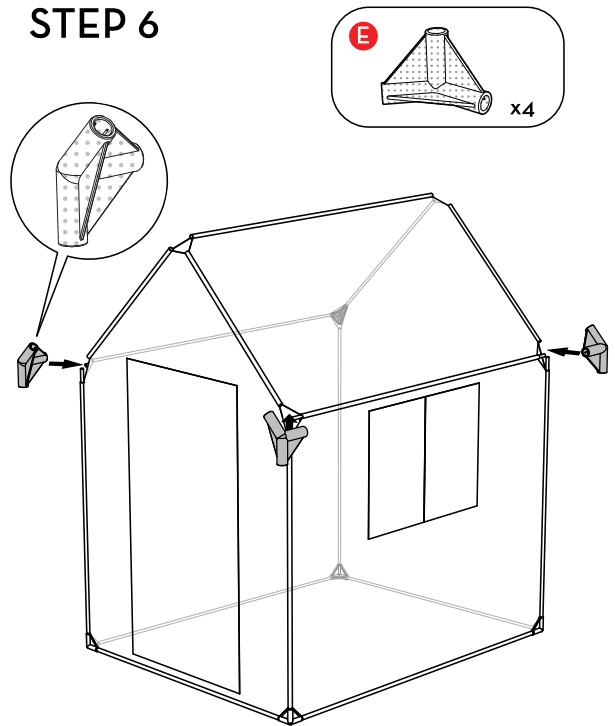


STEP 7

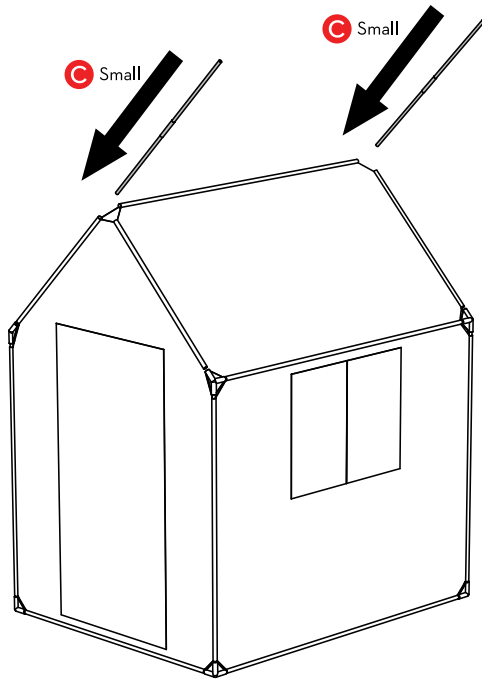

STEP 8

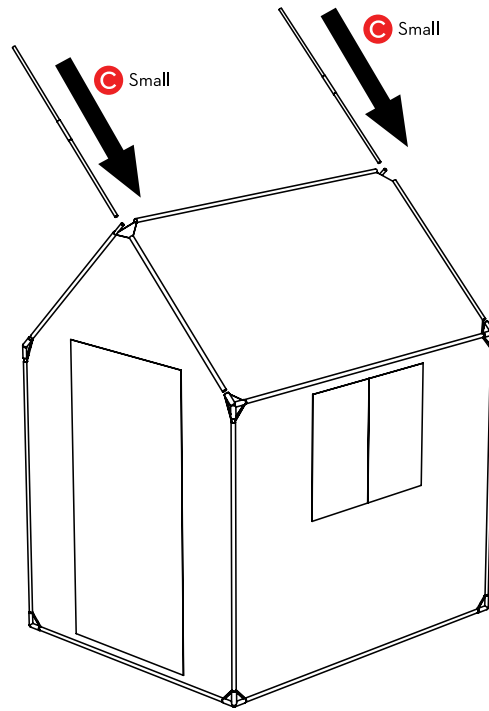

STEP 9

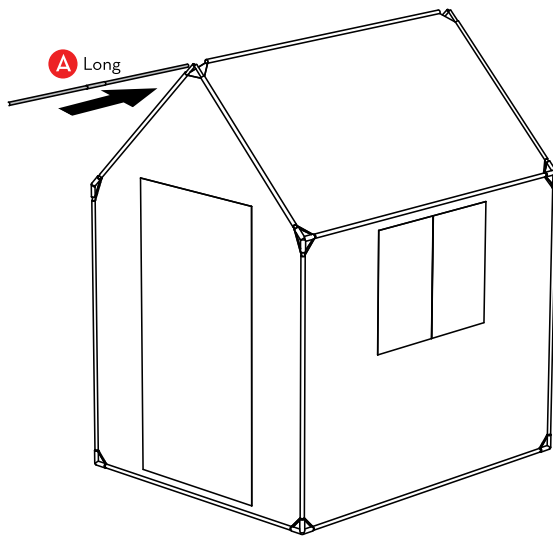

STEP 10

